

MIBOXER[®] | Mi • Light

Panel Remote

B Series selection: B1 / B3 / B4 / B0

1. Features

We adopt a high precision capacitive touch screen IC. The controller is very stable utilizing a 2.4GHz high RF signal for wireless control with long distance controlling, low power consumption and high speed transmitting rate.

All B series products work on our smart LED Lighting system including LED controller and smart panel controller and more.

2. Parameters

B Series: Powered by 3V(2*AAA Battery)

Working Voltage: 3V(2*AAA Battery)

Standby Power Consumption: 20uA

 
Transmitting Power: 6dBm

Transmission Frequency: 2.4GHz

Working Temp.: -10~40°C

Control Distance: 30m

Size: 86*86*16mm

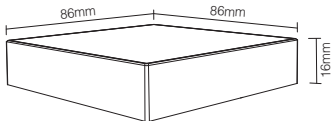


3. Function of keys


Note: When touching the button, LED indicating lamp will flash once with different sound (Touch slider with no sound).


B1

 
4-Zone Panel Remote (Brightness)

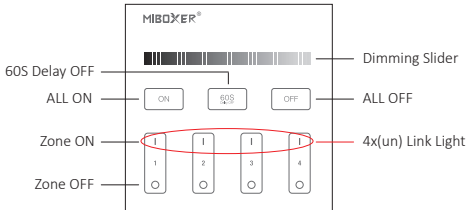


 Touch dimming slider to change the brightness from 1~100%.

 Touch master ON, turn on all linked lights.
Long press 5 seconds to turn ON the indicating sound.

 When the light is ON, press "60S Delay OFF", the light will be OFF Automatically after 60 seconds.

 
 Touch master OFF, turn off all linked lights.
Long press 5 seconds to turn OFF the indicating sound.

 Touch Zone ON, turn on zone-linked lights.

 Touch Zone OFF, turn off zone-linked lights.

B3

4-Zone Panel Remote (RGBW)

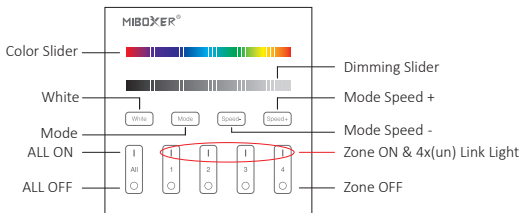

 Touch color slider, choose the color you want.


 Touch dimming slider to change the brightness from 1~100%.


 Touch white button to white light mode.

 Switching modes.

 Slow the speed on present dynamic mode.

 
 Accelerate the speed on present dynamic mode.

 **ALL ON:** Touch to turn on all linked lights.
Long press 5 seconds to turn ON the indicating sound.
Zone(1-4) ON: Touch zone ON, turn on zone-linked lights.

 **ALL OFF:** Touch to turn off all linked lights.
Long press 5 seconds to turn OFF the indicating sound.
Zone(1-4) OFF: Touch zone OFF, turn off zone-linked lights.

B4

4-Zone Panel Remote (RGB+CCT)

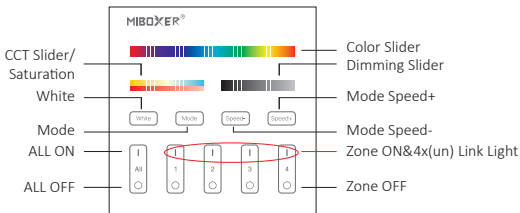

Touch color slider, choose the color you want.



Under white light mode, adjust color temperature;
Under color light mode, change color saturation.



Touch dimming slider to change the brightness from 1~100%.



Touch white button to white light mode.



Switching modes.



Slow the speed on present dynamic mode.



Accelerate the speed on present dynamic mode.



ALL ON: Touch to turn on all linked lights.

Long press 5 seconds to turn ON the indicating sound.

Zone(1-4) ON: Touch zone ON, turn on zone-linked lights.

 


ALL OFF: Touch to turn off all linked lights.

Long press 5 seconds to turn OFF the indicating sound.

Zone(1-4) OFF: Touch zone OFF, turn off zone-linked lights.

B0 Panel Remote (RGB+CCT)

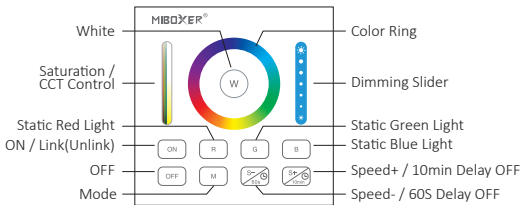

Touch the color ring to change colors.



Under white light mode, adjust color temperature;
Under color light mode, change color saturation.



Slide the brightness slider to adjust the brightness.



Press the button to get white light.



Touch ON button, turn on the linked device.



Touch OFF button, turn off the linked device.



Static red light.



Static blue light.



Static green light.



Dynamic mode switching button.



 
 
 
Accelerate the speed under present dynamic mode.
Under static mode, Long press for 2 seconds, the light shine once, the light will be off after 10 minutes.



Slow the speed under present dynamic mode.
Under static mode, long press for 2 seconds, the light shine once, the light will be off after 60 seconds.

4. Link / Unlink (B1-B5)

Linking Instructions


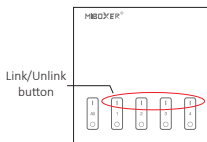



- 1 Switch off the light, after 10 seconds switch on again.
- 2 When the light on, short press any zone of "□" 3 times within 3 seconds.
- 3 The light blink 3 times slowly means the linking is done successfully.



If the light not blink slowly, the linking failed, pls switch off the light again, and follow the above steps again.

   Unlinking Instructions

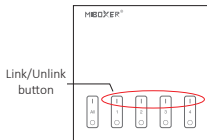

- 1 Switch off the light, after 10 seconds switch on again.
- 2 When the light on, short press "□" 5 times within 3 seconds.
- 3 The light blinking 10 times quickly, means the unlinking successfully.

 
 
 
Unlinking must be the same zone with the Linking



If the light not blink quickly, the unlink failed, pls switch off the light again, and follow the above steps to unlink again.

4. Link / Unlink (B0)

Linking Instructions


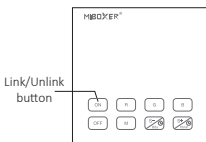



- 1 Switch off the light, after 10 seconds switch on again.
- 2 When the light on, short press "ON" 3 times within 3 seconds.
- 3 The light blink 3 times slowly means the linking is done successfully.



If the light not blink slowly, the linking failed, pls switch off the light again, and follow the above steps again.

   Unlinking Instructions

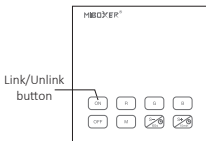


- 1 Switch off the light, after 10 seconds switch on again.
- 2 When the light on, short press "ON" 5 times within 3 seconds.
- 3 The light blinking 10 times quickly, means the unlinking successfully.




If the light not blink quickly, the unlink failed, pls switch off the light again, and follow the above steps to unlink again.

5. Installation

 
B series Installation



 
1. Tear out the back tape.



 2. Stick the holder on the position where you want.



 3. Install 2*AAA battery.



4. Put the rotating switch on the front of holder.

6. Attention

1. Please check the cable and make the circuit is correct before power on.
2. When installing, handle with care to avoid braking of the glass panel.
3. Do not use RF wireless controllers or RF lights close to large metal components or with a high magnetic field as it will disrupt the signal frequency and negatively affect the control distance.



Made in China